

Jotem Water Treatment uses Liqui-Cel® for Oxygen Removal from the Feedwater of a Central District Heating System in a Dutch Power Station

Introduction

Central district heating systems have gained attention in recent years because they can be more efficient than localized boiler units. The efficiency of district heating is usually realized due to power generation plants being able to produce heat and electricity simultaneously. They also use more advanced flue gas cleaning than single boiler systems resulting in better pollution prevention.

In central district heating systems, heated water from power plants is distributed to densely populated residential and industrial areas by insulated piping networks. Large storage tanks are typically used to safely store heat for use during periods of peak load demand. High water quality is required to maintain the integrity of a centralized system's infrastructure.

To prevent internal corrosion and to increase the lifetime of piping and storage tanks, water needs to be treated carefully. Inlet water is typically filtered, softened and has low oxygen content. Impurities are removed during the initial filling of the system; however, water is also needed to feed the recirculation system that is used to compensate for any water loss during operation or seasonal fluctuations. As part of this refilling system, Jotem Waterbehandeling BV installed Liqui-Cel® membrane contactors for O₂ removal at a Netherlands power station.

Liqui-Cel® Membrane Contactor Technology

The technology behind Liqui-Cel® Membrane Contactors is based on Henry's Law, which states that gasses will dissolve in water relative to their partial pressure above the liquid. The solubility constant (Henry's Constant), which is different for each gas, also depends on temperature. Water below atmospheric standard conditions (20° C, 1bar) and in contact with ambient air, contains up to 8-9 ppm (mg/L) of oxygen.

Water flows through the contactor on the outside (shellside or liquid side) of the hollow fiber

membrane. Because the membrane is microporous and hydrophobic only the gas molecules are able to pass through the membrane. Applying a vacuum or using an inert sweep gas on the Lumenside will lower the partial pressure of the gas that needs to be removed and excess gasses will be carried away into the vacuum.

System Design

The goal was to achieve an O₂ specification of < 10ppb for filling the storage water tanks and to maintain a constant fill level. For an inlet water flow of 30 m³/h, Jotem installed four 14-inch Liqui-Cel® Contactors connected in series. To achieve the low O₂ requirements, the system operates in N₂-vacuum (combo) operation. The vacuum pump pulls vacuum through a parallel connected manifold from the bottom gas ports, while the N₂ sweep gas enters the contactors through the top gas ports. The O₂ content is reduced through each membrane step.



Figure 1: Oxygen removal system at Dutch power station

The necessary 2.2 m³/h of total nitrogen sweep gas (0.55 m³/h for each module) is produced in a separate N₂-generator with a pressure swing absorption technique. This generator constantly creates N₂ gas with a purity of > 99.99% (100ppm of O₂) from ambient air. For each cubic meter of N₂, about 6 m³ of compressed air (at 6 bar) is required.

TechBrief

Liqui-Cel®
MEMBRANE CONTACTORS

The nitrogen can be stored in pressurized tanks during system stand-by.

The vacuum level of 66mbar absolute (50 torr) is created by a liquid ring vacuum pump with an external water cooling system. The service water is recycled to about 50% by a gas/water separator.

Results


The system exceeded expectations, achieving oxygen removal down to 5ppb. The main advantage of the Liqui-Cel® Membrane Contactor system compared to conventional degassing technology is its small footprint. This allowed Jotem to install the O2 removal system close to the point-of-use at the

power station's storage tanks, saving additional piping and space costs.

The chemical free, deoxygenation system without an external N2-supply, provided an excellent water treatment solution with low energy demand and operating costs.

For more information about Liqui-Cel® Membrane Contactors or a detailed system sizing, please contact your Membrana representative or visit us online at www.Liqui-Cel.com

For more information about the on-site system integration, please visit www.jotem.nl.

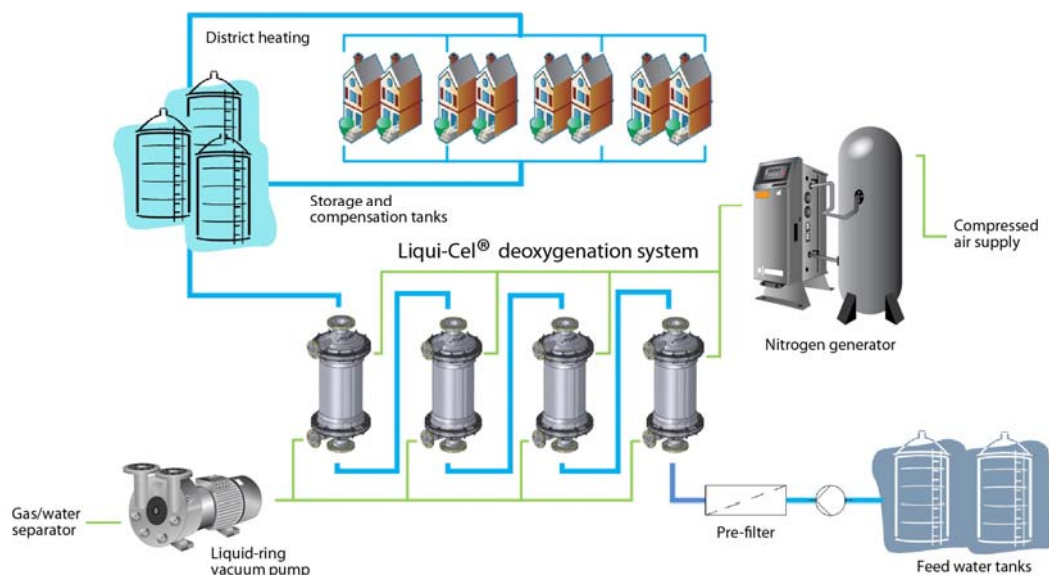

This product is to be used only by persons familiar with its use. It must be maintained within the stated limitations. All sales are subject to Seller's terms and conditions. Purchaser assumes all responsibility for the suitability and fitness for use as well as for the protection of the environment and for health and safety involving this product. Seller reserves the right to modify this document without prior notice. Check with your representative to verify the latest update. To the best of our knowledge, the information contained herein is accurate. However, neither Seller nor any of its affiliates assumes any liability whatsoever for the accuracy or completeness of the information contained herein. Determination of the suitability of any material and infringement of any third party rights, including patent, trademark, or copyright rights, are the sole responsibility of the user. Users of any substance should satisfy themselves by independent investigation that the material can be used safely. We may have described certain hazards, but we cannot guarantee that these are the only hazards that exist. Nothing herein shall be construed as a recommendation or license to use any information that conflicts with any patent, trademark or copyright of Seller or others. Please read our Operating Manuals carefully before installing and using these modules.

THE INFORMATION CONTAINED HEREIN AND SELLER'S PRODUCTS ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR USE, OR NON-INFRINGEMENT OF INTELLECTUAL PROPERTY. IN NO EVENT SHALL SELLER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR ANY DAMAGES WHATSOEVER RESULTING FROM THE USE OF INFORMATION CONTAINED HEREIN AND SELLER'S PRODUCTS.

Liqui-Cel®, SuperPhobic®, MiniModule®, and MicroModule® are registered trademarks of Membrana-Charlotte, A Division of Celgard, LLC.

©2011 Membrana – Charlotte

All rights reserved.

(TB 80)

Membrana – Charlotte
A Division of Celgard, LLC
13800 South Lakes Drive
Charlotte, North Carolina 28273
USA
Phone: +1 704 587 8888
Fax: +1 704 587 8610

Membrana GmbH
Oehder Strasse 28
42289 Wuppertal
Germany
Phone: +49 202 6099 - 658
Phone: +49 6126 2260 - 41
Fax: +49 202 6099 - 750

Japan Office
Shinjuku Mitsui Building, 27F
1-1, Nishishinjuku 2-chome
Shinjuku-ku, Tokyo 163-0427
Japan
Phone: +81 3 5324 3361
Fax: +81 3 5324 3369

MEMBRANA
A POLYPORE COMPANY

www.liqui-cel.com



ISO 9001
ISO 14001